



Set Up Guide

1. **Unscrew large cap and add clean water to tank; Re-install cap (make sure gasket seals)**
2. **Place tank on ground within 12' of power source. Do not plug in at this time**
3. **Unhook mister tubing from side of tank. Note: Mister heads are conveniently 10' apart**
4. **Clip last mister head on far side of canopy or tent material**
5. **Position second head so the tubing is as taught as possible**
6. **Continue in this fashion until you come to the tank**
7. **Remove shipping plug from pump (push ring at mouth of pump towards pump and simultaneously pull the tube out of it)**
8. **Make sure tubing end is clean and simply insert into the pump (push until it bottoms out)**
9. **Loosen small cap to tank (allows tank to breathe)**
10. **Remove power cord from mesh bag and plug into pump; then into power source**
11. **Turn on switch (at the end of the adapter)**

Enjoy Hours Of Cool Misting Comfort!

Pack Up Guide

1. **Turn off switch and unplug from power source (Coil cord and place into mesh bag).**
2. **Unplug mister tube from pump (push ring at mouth of pump towards pump and simultaneously pull the tube out of it)**
3. **Let water drain from tubing before coiling to a 12" loop (Reattach to side of tank)**
4. **Empty water from tank and replace large cap**
5. **Tighten small air breather cap**
6. **Turn on switch (at the end of the adapter)**

Put Away Until Another Hot Day!

Maintenance

If a misting head is not providing a fine mist, there could be calcium build up on the head. First try using your finger nail or brush and lightly scrape the head of the mister. If it does not allow proper misting, turn off mister and replace head with spare mister head. To disconnect, push the ring at mouth of the fitting toward the fitting and simultaneously pull the tube out of it. You may need pliers; be careful not to pinch head or tubing.

To clean the head use a product like CLR or Lime Away. Pour a small amount of CLR or Lime Away into a container enough to cover the misting head and follow instructions on the bottle for how long to soak. Once head is clean it can be reinserted in the system. Be sure misting head is rinsed thoroughly with clean water.

Routine Maintenance

Heads should be routinely cleaned every 3 months or before a long storage using the instructions above, this will prevent the build up of calcium and lime in mister heads.

Product Limited Warranty

Mist-er-Comfort warrants that its products shall be free of defect in material and workmanship under normal use within the operating specifications for a period of one (1) year from the date of purchase; see details on warranty information on our website.

Questions please refer to website www.mist-er-comfort.com
or call 1-888-MIST-370
(1-888-647-8370)